






CONFIGURABLE ITEMS

A number of items are configurable by the wired controller. If an indoor unit is without a wired controller then the unit requires configuration, it may be temporarily connected for the procedure to be undertaken. In order to access the menu

RBC-AMT32E/RBC-AMS41-E

Press  +  +  buttons at the same time for more than 4 seconds

RBC-AMS51E-ES

Press and hold the [ **MENU**] button & [] button at the same time for more than 4 seconds to display "Field setting menu"

SENSOR LOCATION

ITEM	DESCRIPTION	VALUE	DEFAULT	ITEM
32	Sensor location	Return air/room sensor OR in local controller	0000: return air sensor 0001: remote sensor	0000

